
Hybrid Series


## MPF Hybrid Brush Tip

Patent pending (A.N.: CY202200003)


Due to the decrease of High-Quality Kolinsky, our solution was to to incorporate a Felt Nib insert within the hair bundle. This absorbent Felt Nib when wet withholds water and due to the fact that the hair bundle is wrapped around the felt nib creates a constant humid environment. This keeps the hair in a constant humid state.

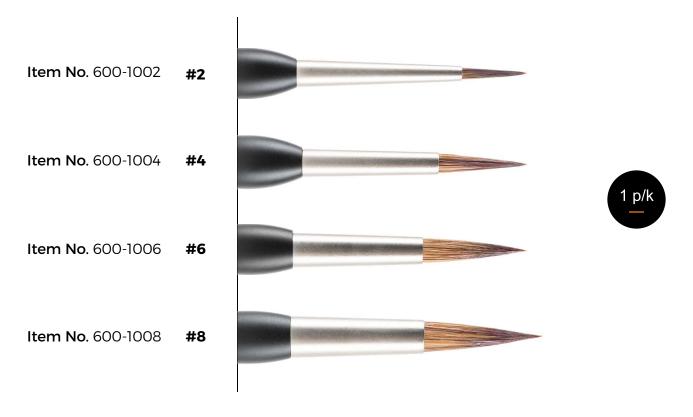

## Absorbent Felt Nib

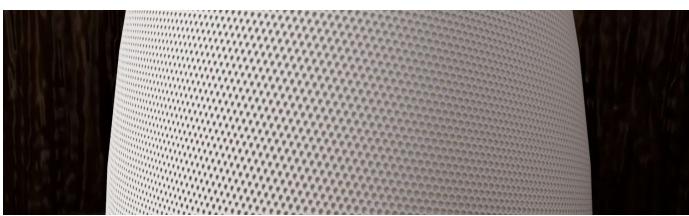

## Compatible with every MPF Brush Handle.

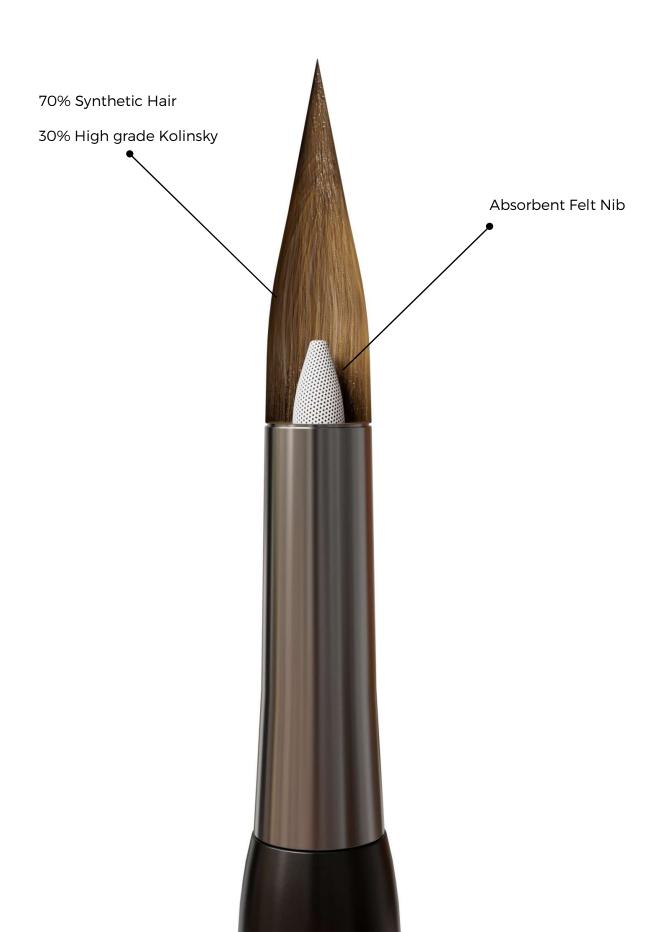

## MPF Hybrid Plus Brushes & Brush Kit

Our recent Innovation in the dental brush industry, the Hybrid brush line with its absorbent internal nib implementation within the brush head, allowed us to create a much better humid environment for Synthetic hair.

The Hybrid Plus brush series are made out of 100% high grade synthetic hair that is perfect when being used for dental ceramics and staining. The absorbent material in the core of the hair bundle mimics the action of the natural hair, and delivers the exact humidity levels that are needed.

This innovative brush tip design is housed in our complete plastic handles, that also contain a few metallic balls within the ferrule of the brush tip. These balls are allowing more condensation when activated with movement.



